


A. Sedan


**Removal**

---

- 1 Remove door liner (72-100).
- 2 Pull off plastic sheet along top.
- 3 Remove screws from inside controls.

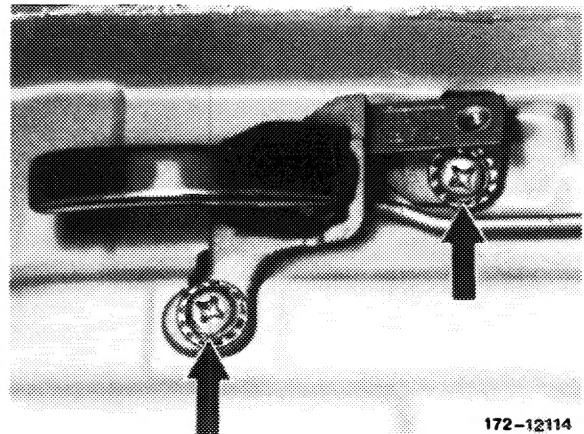

- 4 Turn inside controls around pull rod towards rear and detach pull rod.

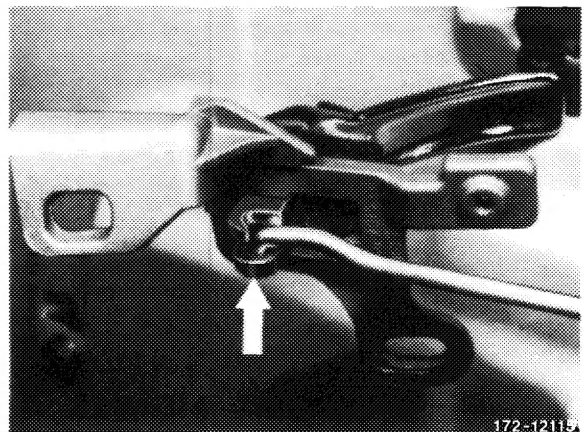


- 5 Detach pull rod at door lock.

**Installation**

---

- 6 Install in reverse sequence.

**Note:** Adjust linkage to remove play.

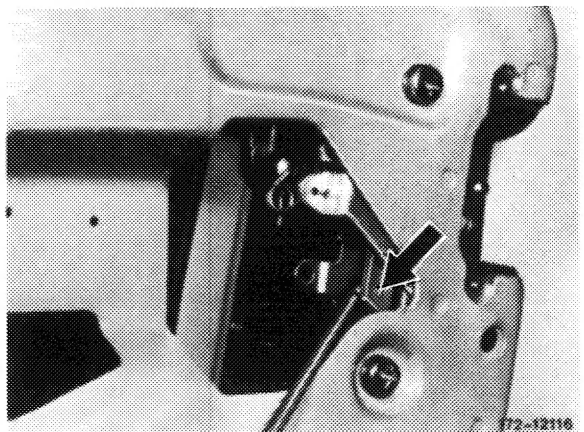

## B. Coupe


### Remove

---


1 Remove door cover (72–100, section B).

2 Remove plastic foil in the upper area.


3 Remove screws at the remote control.

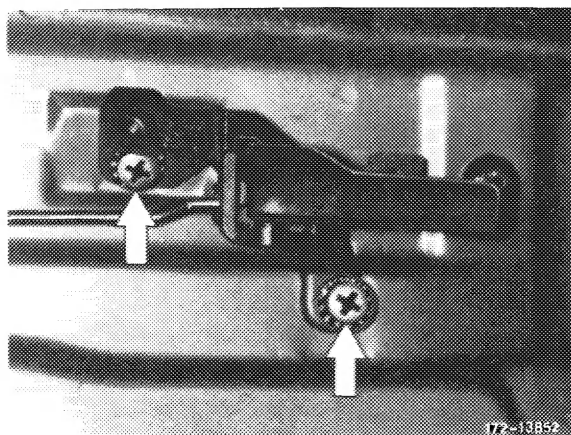


4 Twist remote control around the pull rod to the rear and disconnect pull rod.

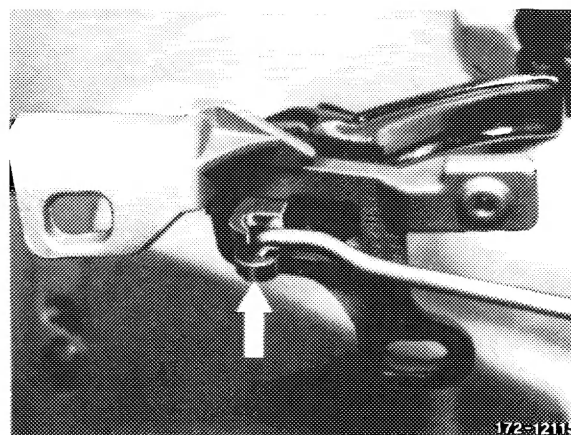


5 Disconnect pull rod at door lock.

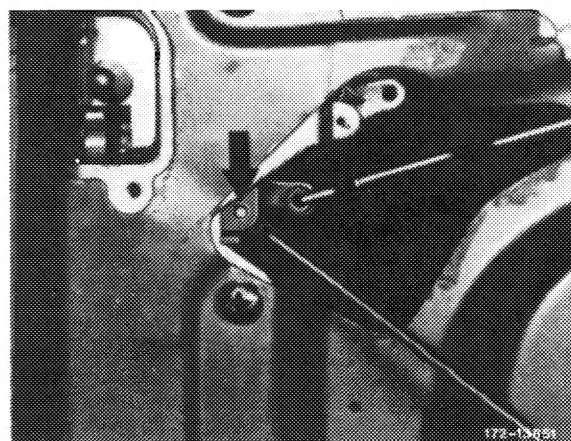


6 Unscrew screws at the safety flap.

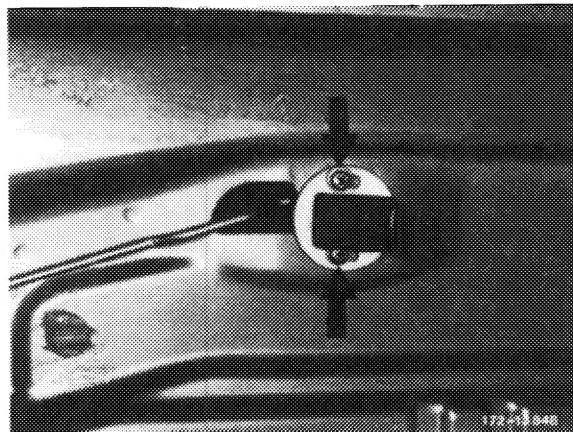

7 Disconnect interlocking linkage (1st version) on door lock or (2nd version) on angular lever.

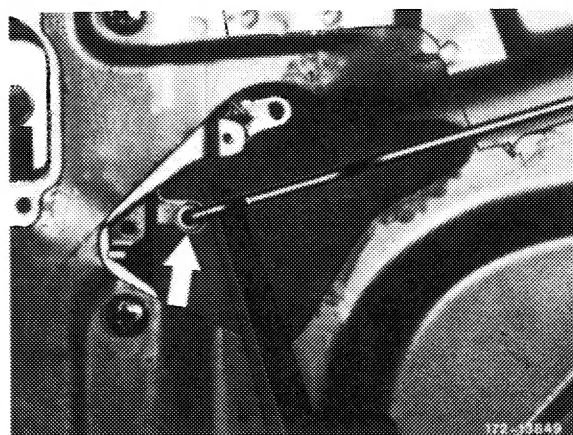

Interlocking linkage 1st version

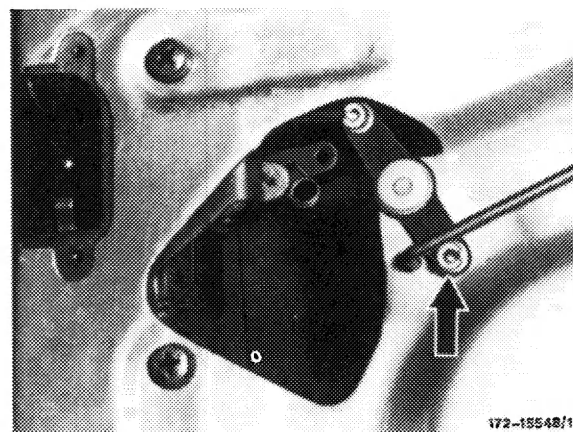

Interlocking linkage 2nd version

## Install

---

8 Installation takes place in reverse order.

**Note:** The linkage must be adjusted without play.

Finally check adjustment. Ensure that the door locked with the inner safety lock cannot be opened with the outside door handle.